


TRODAT IDEAL INSTAPLATE i40B PHOTOPOLYMER SYSTEM & STEPS

Producing an InstaPlate photopolymer plate in just 3 steps

ALIGNMENT AND EXPOSURE

Align Trodat Ideal InstaPlate over the negative

Expose Trodat Ideal InstaPlate

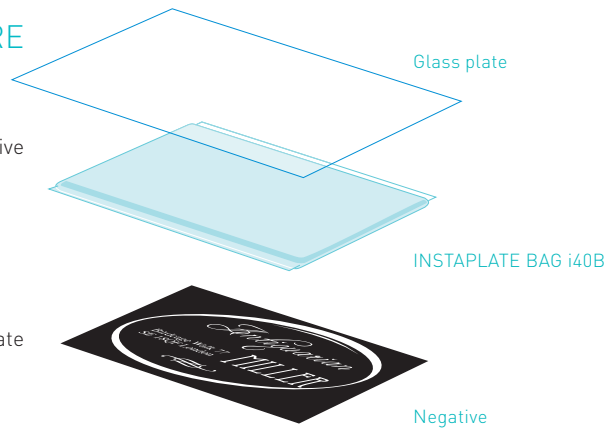


1

OPENING AND CLEANING

After exposure, flip the InstaPlate over so the InstaPlate logo reads backwards. Cut open and discard cover film side


Wash out text plate (substrate / letter side)

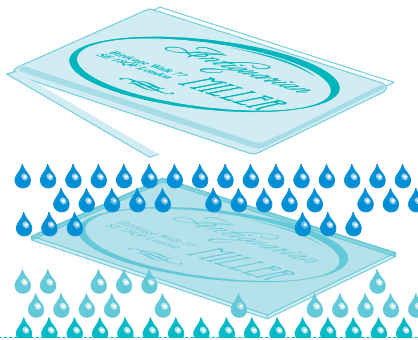

2

POST-EXPOSURE

Rinse the text plate and post-expose for a minimum of 10 minutes.

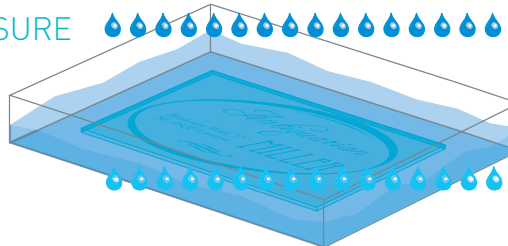

3

DONE

